



INSTRUCTION MANUAL

Curls Très Secret



Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

IMPORTANT SAFEGUARDS

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use.

1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water.
Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on or near children or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Hair lacquers and fixing sprays contain flammable materials.
Do not spray while using the hair curler.
16. Do not direct the hair curler towards the eyes or other areas sensitive to heat such as the face and neck.
17. Take special care when using the hair curler near children or anyone who is sensitive to heat.
18. Switch the hair curler off before putting it down, even if it's just for "a moment".
19. Keep the ceramic curl chamber free of dust or fluff
20. Keep all packaging and plastic bags out of the reach of children as these pose the risk as a choking hazard.
21. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

FOR HOUSEHOLD USE ONLY

ADDITIONAL SAFEGUARDS

1. Do not try to repair the appliance yourself.
Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when held by the handle.
3. The curler must be positioned so that the opening of the curling chamber is facing upwards.

Curls Très Secret

The Hair Curler will create many different curl effects in your hair. Always ensure that the sections of hair you want to curl are no bigger than 3cm wide.

The type of curl will depend on the temperature setting selected.

TEMPERATURE SETTINGS

There are 10 temperature settings to select from:

- 140°C
- 150°C
- 160°C
- 170 - 230°C

RECOMMENDED TEMPERATURE SETTINGS

- 170°C - for delicate, fine or coloured hair
- 190°C - for normal textured hair
- 210°C – for thick or wavy hair

TIMER SETTINGS

There are 11 timer settings to select from:


- 5 – 15 seconds

ROTATION MODES

There are 3 rotation modes to select from:

- “A” – AUTO
- “L” – LEFT rotation
- “R” – RIGHT rotation

KNOW YOUR CURLS TRÈS SECRET

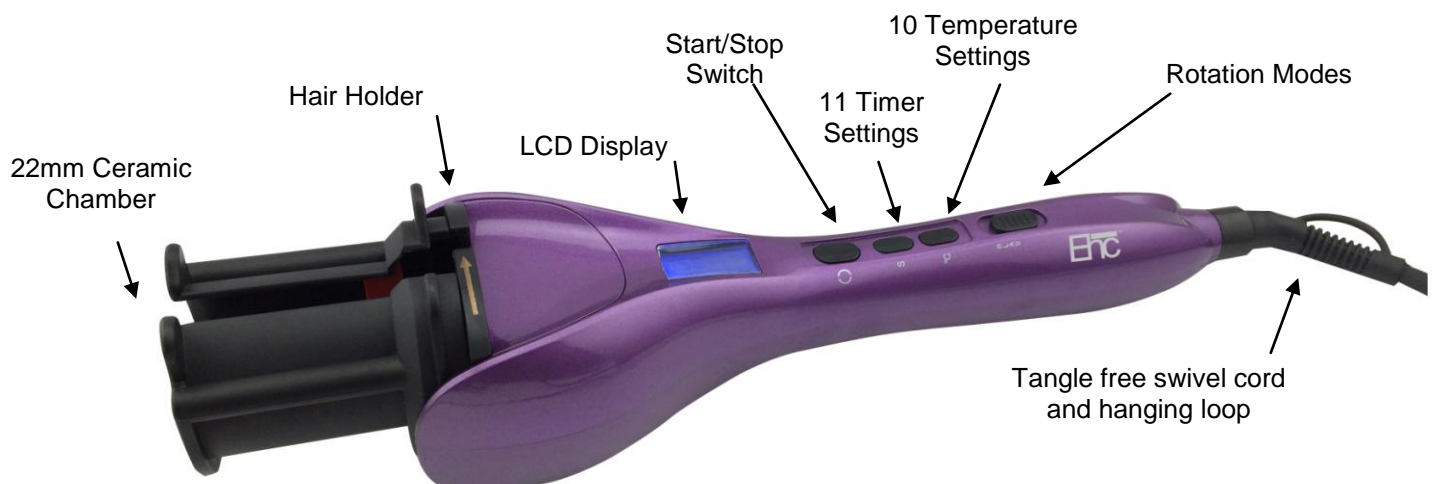

FEATURES

- 10 Temperature settings for long lasting results
- 11 Timer settings
- 3 Rotation Modes; Auto, Left and Right
- Fast heating system ready to use in 30 seconds
- Suitable for longer hair lengths.
- LCD display
- Automatic power-off protection
- Natural curling result

USER INSTRUCTIONS

We recommend you always start with the lowest temperature setting and increase the level of heat as required.

- Ensure hair is dry and combed through.
 - Plug the curler into a compatible mains socket.
 - Slide the switch to your desired rotation mode (A, L or R).
 - Press the “C” button to set the temperature. The selected temperature will flash in the LCD display. The curler is ready to use once the preset temperature has stopped flashing.
 - Press the “S” button to select a time setting.
 - Separate a section of hair that is no bigger than 3cm
 - Please note the curler must be positioned so that the opening of the Curling chamber is facing upwards
 - Position the curler where you want the curl to start. The hair section must be held straight, and placed neatly through the centre of the curler.
 - Ensure the hair section is put into the Hair Holder.
 - Press the “()” button, hair will automatically be drawn into the chamber.
 - Hold the curler until you hear four quick beeps.
 - Gently pull the curler away from the head, to release the hair and reveal the curl.
 - To allow the curl to set, do not comb or brush the hair until it cools.
- For styling and better results use hairspray.

CAUTION:

- If you have placed too much hair through the centre of the curl chamber, The curler will stop and beep to indicate a problem.
- If you pull curler away from head before you hear the beeps, the curl will straighten out.
- Do not place the curl chamber too near the scalp.
- Do not place hair curler in water or any other liquid.
- Do not wrap the power cord around the hair curler, instead coil the power cord loosely by the side of the appliance to avoid any damage to the power cord.
- Ensure to unplug the appliance after use.
- Do not tug at the appliance plug.

AUTOMATIC SWITCH OFF

This appliance has an automatic switch off function for added safety. If the appliance is switched on for longer than 60 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply slide the switch to the position and then slide to the relevant setting to turn the power on.

CLEANING & MAINTENANCE

The appliance may require cleaning due to build-up of residue from hair products.

- Ensure the appliance is switched off, unplugged and cool
- Wipe the body of the appliance off with a soft damp cloth. If necessary use a little washing-up liquid.
- Do not use harsh or abrasive cleaning agents or solvents
- Ensure the appliance has dried thoroughly before reusing.

TO CLEAN THE CHAMBER

Insert the easy-twist chamber cleaner tool into the curl chamber and rotate by twisting the handle to clean the inside.

After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered/modified, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specification

100-240V 50Hz 25W

The Environment

This appliance is rated at an operating input of 35 watts.



Please consider the environment when disposing of packaging.

Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal, or disposal advice.



**8 Palala Street, Protec Park, Terenure Ext. 42,
Kempton Park, South Africa, 1610**

Tel: 011 393 – 1328

Fax: 011 393 – 1501

www.sp-africa.com