

# CARMEN

---

## PARIS



# INSTRUCTION MANUAL

## MINI STRAIGHTENER



**Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.**

### **Important Safeguards**

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:

1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water. Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Hair lacquers and fixing sprays contain flammable materials. Do not spray while using the straightener.
16. Be careful when using the straightener near areas sensitive to heat such as the face and neck.
17. Take special care when using the appliance near children or anyone who is sensitive to heat.
18. Switch the appliance off before putting it down, even if it's just for "a moment".
19. Do not use the appliance within 1 meter of any other electrical or electronic appliance (e.g. TV, computer,..) as it may cause interference.


### **Household use only**

### **Additional Safeguards**

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.

2. This product has been designed to operate safely when held by the handle. When operating, do not hold the appliance by the AC power cord.
3. Avoid contact with HOT plates/attachments as they will burn the skin with which it comes into contact.
4. The areas above and below the plates may become very hot during use. To avoid burning yourself hold the appliance further back.
5. If the electrical circuit is overloaded with other electrical appliances, your appliance may not operate properly. It should then be operated on a separate circuit from other appliances.
6. The areas above and below the plates may become very hot during use. To avoid burning yourself hold the appliance further back (grip area as noted in the picture below).

## Know Your Straightener

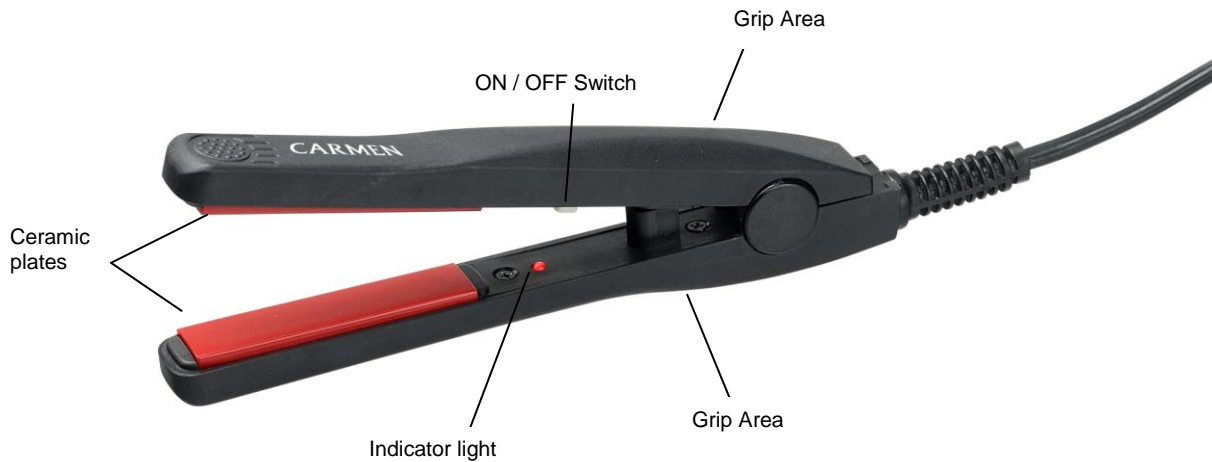

### Instructions for Use

1. After washing your hair, towel dry.
2. The straightener has been designed to work with dry hair.
3. Comb your hair using a wide toothed comb to ensure that your hair is completely tangle free before styling.
4. Divide your hair into styling sections, not more than 5 to 7 centimetres wide and 1 to 1½ centimetres thick, brushing each section thoroughly.
5. Place the straightener as near to your scalp as possible. Beware of burning yourself!
6. Clamp your hair between the 2 styling plates.
7. Hold the straightener closed tight for 5 to 10 seconds. The texture of your hair will determine how long to keep the hair clamped.
8. Gently slide the straightener slowly towards the hair ends. The anodised straightening plates avoid the hair from sticking to the plates.
9. Repeat the above process on all sections of hair until completely finished.
10. Slide the settings switch to the OFF position. Always unplug the appliance immediately after use.

**N.B.: The areas above and below the plates may become very hot during use. To avoid burning yourself hold the appliance further back (grip area as noted in the picture above).**

### Care and Maintenance

1. Switch the straightening iron off, unplug it and let it cool down.
2. Wipe the body of the straightening iron off with a soft damp cloth. If necessary use a little washing-up liquid.
3. Remove deposits from plates by brushing with a soft cloth.
4. Do not immerse the straightening iron in water or any other liquid.
5. Do not use harsh or abrasive cleaning agents or solvents.

### After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

TEL: 011 393 1328 FAX: 011 393 1501 EMAIL: <a href="mailto:technical@sp-africa.com">technical@sp-africa.com</a>
---

### Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

### Specifications

220-240V 50Hz 15W

### The Environment

**eco**friendly

Please consider the environment when disposing of packaging.  
Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal or disposal advice.



**8 Palala Street, Protec Park, Terenure Ext. 42,  
Kempton Park, South Africa, 1610**

**Tel: 011 393 – 1328**

**Fax: 011 393 – 1501**

**[www.sp-africa.com](http://www.sp-africa.com)**