

CARMEN



INSTRUCTION MANUAL

TONING MASSAGER



Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

Important Safeguards

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:


1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water. Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Be careful when placing hot surfaces on areas sensitive to heat such as the face and neck.
16. Do not use on or near the eyes.
17. Take special care when using on children or invalids.
18. Switch the appliance off before putting it down, even if it is just for "a moment".
19. Do not allow the air inlet to become blocked or even partially blocked. This may cause the appliance to overheat.
20. Use only on a flat hard surface. The air inlet is located under the main unit, and if the surface is not flat the inlet may get covered, which will cause overheating and ultimately damage to the appliance.
21. Do not place any objects into the air inlets or any other openings.

Household use only

Additional Safeguards

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when held by the handle. When operating, do not hold the appliance by the AC power cord.
3. If the electrical circuit is overloaded with other electrical appliances, your appliance may not operate properly. It should then be operated on a separate circuit from other appliances.

Know your Nail Spa

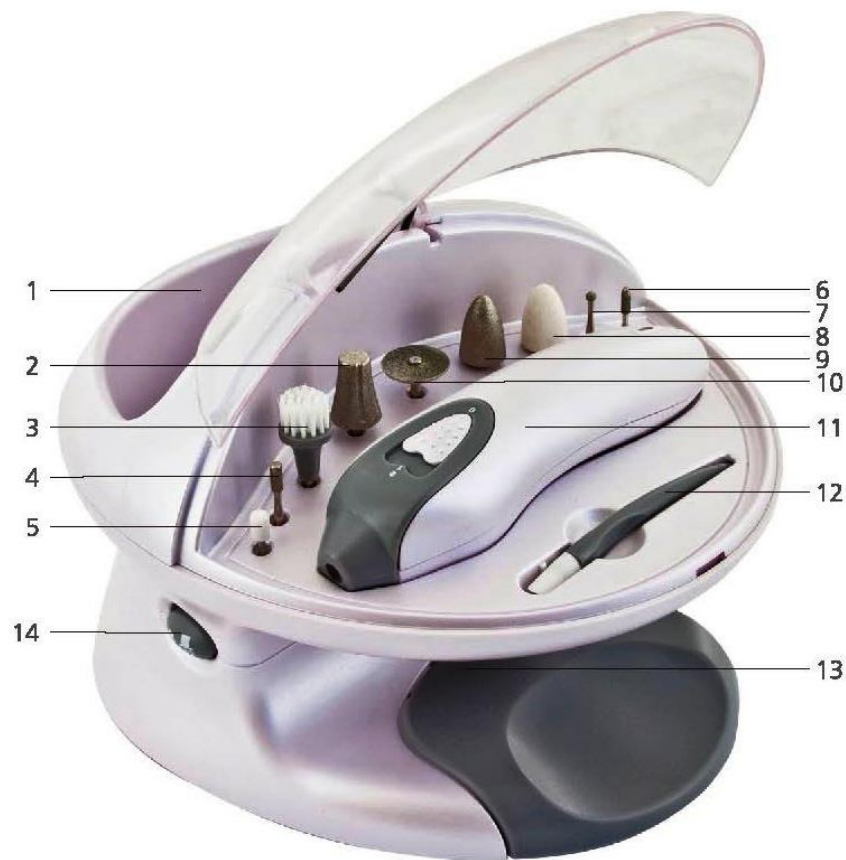

1. Nail Bath
2. Polishing Stone
3. Polishing Brush
4. Grinding Smoother
5. Conical Nail File
6. Fine Grain Cone
7. Soft Shaping Cone
8. Cylinder Shaping Point
9. Spherical File
10. Large Grinding Disc – Coarse
11. Hand Device with Switch for Speed and Direction of Rotation
12. Cuticle Pusher
13. Nail Dryer and UV light
14. On/Off Button

Before Use

The hand device/wand can be used in cordless mode or direct drive mode (using the adaptor). The bubble bath and nail dryer can only be used in direct drive mode using the adaptor supplied.

To use the wand in direct drive mode, plug the adaptor outlet directly into the wand.

To prevent overheating, do not use for longer than 20 minutes at a time. Allow to cool for 10 minutes before resuming use.

Charging and Battery Operation

To charge the wand, place it into the storage compartment in the main unit. Plug the adaptor into the main unit and turn on at the wall socket.

Before using for the first time, allow the wand to be charged for at least 8 hours.

If the wand is fully charged the appliance should function for approximately 40 minutes in cordless mode.

To extend the life of the batteries, allow the wand to run down completely before recharging.

Using your Nail Spa

- You can switch on the wand by pushing the switch from 0 (OFF) to speed I (one) or to speed II (two).
- The speed of rotation can be changed by switching from speed I (one) to speed II (two).
- Choose the particular Attachment you wish to use, depending on the effect you wish to achieve.
- To put on a new attachment place over the top of the wand and push on gently but firmly.
- To remove an attachment, simply pull the attachment off.
- To activate the nail bath and the nail dryer connect the adaptor to the unit. The ON button for the nail bath and nail dryer are marked on the side of the main unit.
- Do not use the nail bath and nail dryer for more than 20 minutes at a time.

Nail Treatment

Manicure

Fill the nail spa with warm water, turn on and place your finger nails in the water. Keep your fingers in the warm water for at least 3 – 5 minutes. Remove your fingers from the nail spa and dry them. Select the attachment of your choice and begin filing and buffing. Once you have finished, rinse your fingers in warm water. After drying them, use the cuticle accessory to push the cuticles back, and tidy your nail bed.

Select the desired attachment to tidy the edges of your nails. Run the fine grain cone around the edge of your nails to smooth any sharp edges.

Rinse off your nails, dry them and apply hand cream or moisturizer.

Filing

Attach the silver filing disc attachment to the styling wand. Switch the wand on and file your nails using small circular movements. Make sure you file the nail in one direction.

To finish, buff your nail with the polishing disc, ensuring a smooth shiny finish. If you have grooves and cracks in the nail you can make the surface smoother using the polishing disc. Be careful not to file away too much of the nail surface.

To remove calloused and hardened skin, use one of the callous files, by slowly moving it evenly over the calloused area.

Pedicure

First soak your feet in warm water for a few minutes and then dry them.

Before filing your toe nails, it is best to separate your toes using a wad of cotton wool between each toe.

Filing and polishing is the same for the toes as for the fingernails.

Nail Dryer

Place your polished nails, one hand at a time in to the nail dryer, and turn on. The ON/OFF switch is located next to the adaptor outlet.

The blue light will come on and your nails will start to dry. Keep your nails in the nail dryer for approximately 5 minutes.

UV Light

The UV light has 2 functions:

- It provides a light.
- The UV light kills certain bacteria.

Care and Maintenance

1. Switch the unit off, unplug it and let it cool down.
2. Wipe the body of the main unit and the wand with a soft damp cloth. If necessary use a little washing-up liquid.
3. Remove deposits from the inlet grille by brushing with a soft brush.
4. Do not immerse the appliance in water or any other liquid.
5. Do not use harsh or abrasive cleaning agents or solvents.

After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specification

230V 220W 50Hz

The Environment

Please consider the environment when disposing of packaging. Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal, or disposal advice.



**8 Palala Street, Protec Park, Terenure Ext. 42,
Kempton Park, South Africa, 1610**

Tel: 011 393 – 1328

Fax: 011 393 – 1501

www.sp-africa.com