

# ELEKTRA™

— *comfort* —



## INSTRUCTION MANUAL

### FAN HEATER

**Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.**

## **Important Safeguards**

Before connecting the appliance check that the voltage indicated on the rating plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:

1. After unpacking, make sure that there are no visible signs of damage.
2. This appliance must only be used as a heater as indicated in the instructions. Any other use is to be considered hazardous. Selian Agencies C.C. and any of its associate companies cannot be held responsible for any damage or injury that may occur due to improper and incorrect use.
3. Do not leave the heater unattended when in use.
4. Do not use with wet hands or feet, or while your body is wet.
5. Do not use the Heater if it is wet.
6. Keep the Heater away from water. Do not use the Heater near water.
7. Should the Heater fall into water, first turn the power supply off and then remove the plug from the wall socket. Remove the Heater from the water, and contact the Consumer Service Centre to inspect your Heater before you use it again.
8. Do not pull the appliance or the power cord to remove the plug from the socket.
9. Before cleaning the appliance, disconnect it from the mains by removing the plug. Follow the cleaning instructions carefully.
10. Should the Heater or protection fuse fail to work properly, turn off the appliance and unplug it from the power outlet.

Contact the Consumer Service Centre for examination and repair.


11. Always unplug the appliance immediately after use.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. During use, ensure that the power cord is completely unwound.
14. Should the power cord need to be replaced, this must be done by the approved Consumer Service Centre.
15. Close supervision is necessary when this appliance is used by or near children, invalids, people with reduced physical and or sensory and or mental capabilities.
16. Always allow the appliance to cool down before packing away.
17. Please follow cleaning instructions carefully so as to avoid injury or damage.
18. Keep the air intake cover free of dust or fluff.
19. Do not allow the air inlet or outlet to become blocked or even partially blocked. This may cause the heater to overheat. If it does overheat, the safety cut-out will cause the heater to switch off and remain inoperable until the unit has sufficiently cooled down. In this event, switch off the appliance, unplug it and let it cool down. Remove any blockage to the air inlet or outlet before resuming use. If the heater should cut out again, even when there is no blockage, contact the approved Service Centre for examination and repair.
20. Do not cover the heater or place anything over it, as this poses a fire risk.
21. Do not use the heater within 1 meter of any other electrical or electronic appliance (e.g. TV, computer,...) as it may cause interference.
22. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

**Household use only**

## **Additional Safeguards**

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when used according to the instruction guide.
3. If the electrical circuit is overloaded with other electrical appliances, your Heater may not operate properly. It should then be operated on a separate circuit from other appliances.
4. The heater and some components of the heater will become HOT during use, and if handled incorrectly may cause burns. Take care when handling the heater during/after use to avoid burns.
5. To avoid damage to the thermal cutout, do not use with a time switch or where the supply is very erratic such that the heater will be switching on and off regularly.
6. In the case of load shedding, turn the heater off until power is completely restored.

# Know your Elektra Comfort Heater

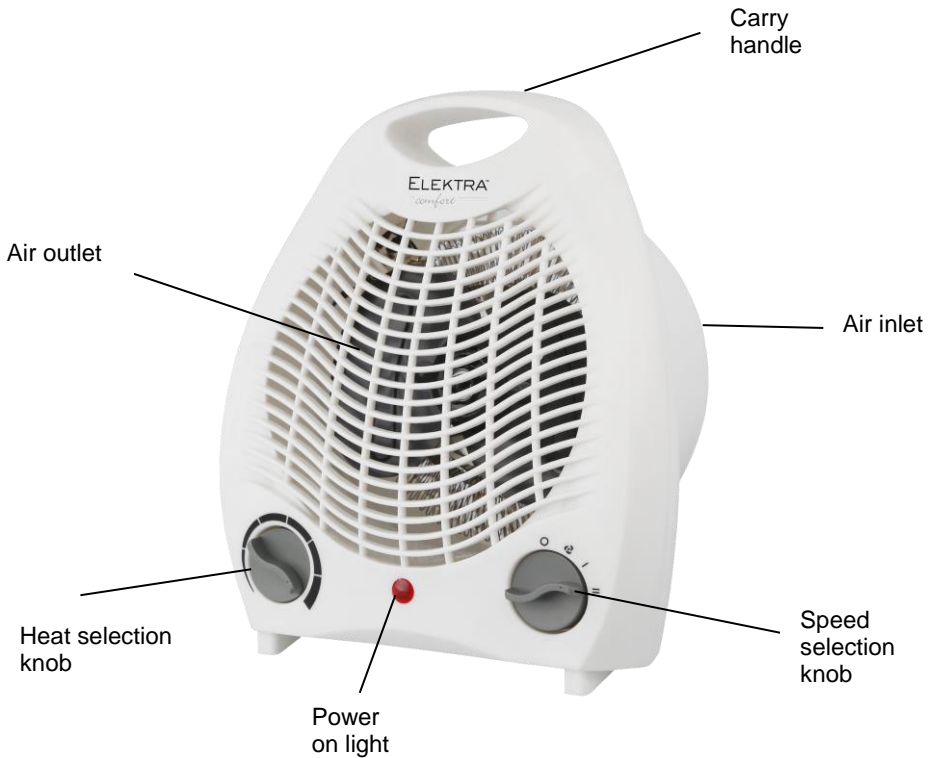

## Turning on your Heater and Temperature Selection

- To turn on the heater turn the Heat/Speed Selection knob clockwise.
- Setting 1 is a fan setting and blows room temperature air.
- Setting 2 is low heat.
- Setting 3 is high heat.
- To turn the heater off, rotate the Heat/Speed Selection knob counter clockwise.

- To increase the heat while using Setting 1 or 2, rotate the Heat Selection Knob clockwise to find the desired temperature.
- To decrease the heat while using Setting 1 or 2, rotate the Heat Selection Knob anticlockwise to find the desired temperature.

N.B. Do not cover the heater, or place anything over it.

## **Instructions for Cleaning**

Should you need to clean the Heater:

- Unplug the Heater from the power outlet.
- Allow the Heater to cool down.
- Wipe it down with a damp cloth and a small amount of non-abrasive cleaning agent.
- Never get the heater wet.
- Do not use it if it is wet.
- Clean the air inlet and outlet regularly using a vacuum cleaner.

## **Storage Instructions**

- The best place to store your Heater when not in use, is in the box you purchased it in.
- Your Heater should be stored in a dry cool place.

## **After Sales Service**

Your Elektra Comfort Heater is not user-serviceable.

If the power light does not illuminate and the Heater does not turn on, check to see that:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

If the power supply cord or any wiring is damaged, or the Heater has been misused or damaged, stop use immediately and contact the Service Centre.

TEL: 011 393 1328  
FAX: 011 393 1501  
EMAIL: [technical@sp-africa.com](mailto:technical@sp-africa.com)

### **Guarantee**

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

### **Specifications**

220-240V 50hz 2000W



**8 Palala Street, Protec Park, Terenure Ext. 42,  
Kempton Park, South Africa, 1610**

**Tel: 011 393 – 1328**

**Fax: 011 393 – 1501**

**[www.sp-africa.com](http://www.sp-africa.com)**