

ELEKTRA™

— *comfort* —

**3 BAR
HALOGEN
HEATER**



ELECTRIC HEATER

The ultimate in warmth



Model No: 2604

Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

Important Safeguards

Before connecting the appliance check that the voltage indicated on the rating plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:

1. After unpacking, make sure that there are no visible signs of damage.
2. This appliance must only be used as a heater as indicated in the instructions. Any other use is to be considered hazardous. Selian Agencies C.C. and any of its associate companies cannot be held responsible for any damage or injury that may occur due to improper and incorrect use.
3. Do not use with wet hands or feet, or while your body is wet.
4. Do not use the Heater if it is wet.
5. Keep the Heater away from water. Do not use the Heater near water.
6. Should the Heater fall into water, first turn the power supply off and then remove the plug from the wall socket. Remove the Heater from the water, and contact the Consumer Service Centre to inspect your Heater before you use it again.
7. Do not pull the appliance or the power cord to remove the plug from the socket.
8. Before cleaning the appliance, disconnect it from the mains by removing the plug. Follow the cleaning instructions carefully.
9. Should the Heater or protection fuse fail to work properly, turn off the appliance and unplug it from the power outlet.

Contact the Consumer Service Centre for examination and repair.


10. Always unplug the appliance immediately after use.
11. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
12. During use, ensure that the power cord is completely unwound.
13. Close supervision is necessary when this appliance is used by or near children and invalids and people insensitive to heat.
14. Always allow the appliance to cool down before packing away.
15. Please follow cleaning instructions carefully so as to avoid injury or damage.
16. Do not use close to furniture, beds and bedding or any flammable liquid or materials.
17. Do not tamper with the "tip-over" safety switch as this poses the risk of fire hazard.
18. Do not cover or block with any object or material, any part of the heater.
19. Do not cover the heater or place anything over it, as this poses a fire risk.
20. Do not use the heater within 1 meter of any other electrical or electronic appliance (e.g. TV, computer,..) as it may cause interference.
21. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

Household use only


Additional Safeguards

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when used according to the instruction guide.
3. If the electrical circuit is overloaded with other electrical appliances, your Heater may not operate properly. It should then be operated on a separate circuit from other appliances.
4. DO NOT COVER THE HEATER.
5. DO NOT TAMPER WITH THE TIP OVER SAFETY SWITCH.

Know your Elektra Comfort Heater

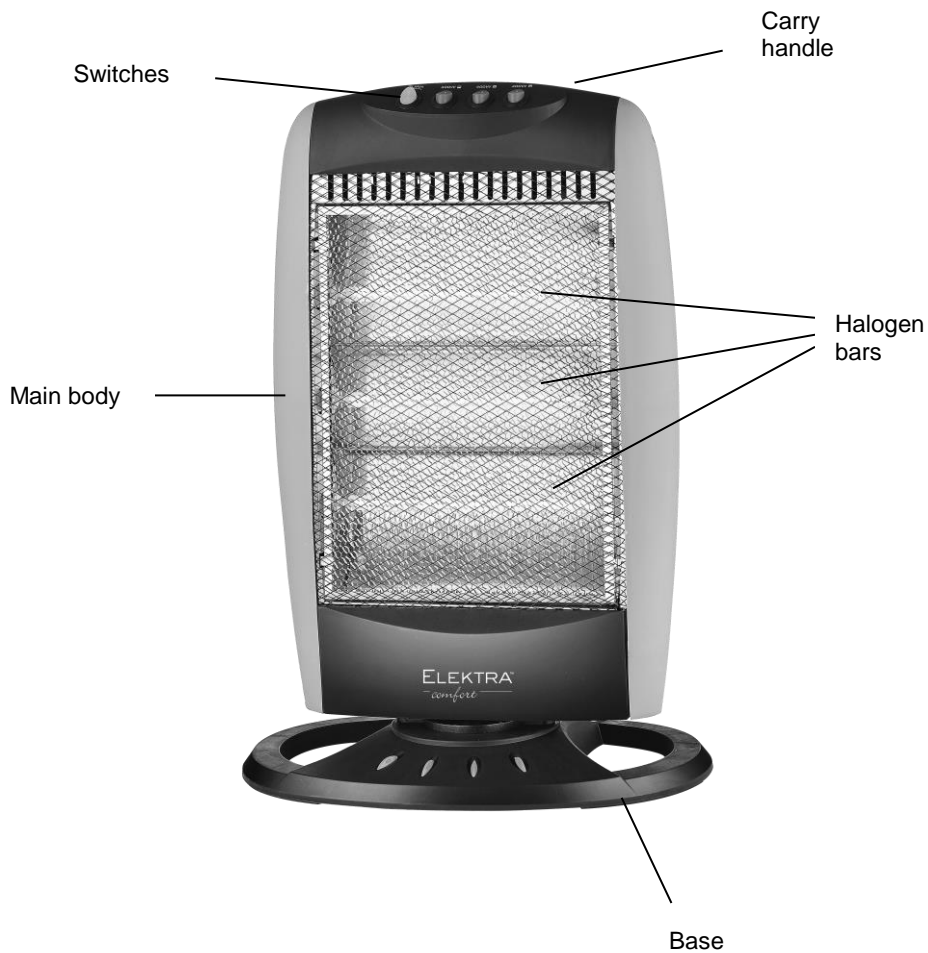

Setting up your Heater

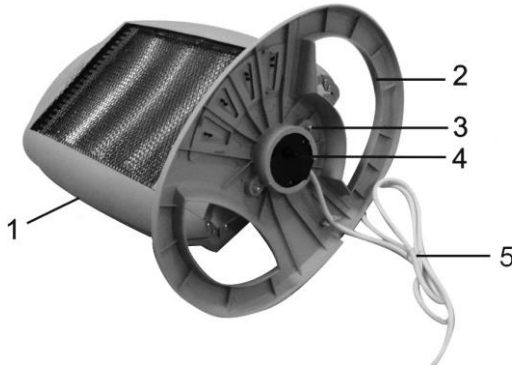

- 1 – Main body
- 2 – Base
- 3 – Screw (2 pcs)
- 4 – Tip over safety switch
- 5 – Power cord

Step 1:

Remove screws from bottom of Main body.

Step 2:

Pull the power cord through the hole in the centre of the Base.

Step 3:

Place main body on to Base ensuring that it is lined up correctly.

Step 4:

Secure the Main body to the Base with screws.

Before switching on the heater please check the following:

- The Base has been attached securely. Never use the Heater without the Base.
- There is no plastic or remaining packaging attached to any part of the heater.

Turning on your Heater and Temperature Selection

- To turn on the heater press the orange POWER button.
This will turn on one heating bar.
- To increase the heat output press the white button marked 400W. This will turn on another heating bar.
- To increase the heat output further, press the last white button marked 400W. This will turn on the third heating bar.
- To turn on the oscillating function, press the white button marked TURN. To switch off the oscillating function press the button marked TURN again.
- To turn the heater off, ensure that all the buttons are up and the POWER button is switched to OFF.

N.B. Do not cover the heater, or place anything over it.

Instructions for Cleaning

Should you need to clean the Heater:

- Unplug the Heater from the power outlet.
- Allow the Heater to cool down.
- Wipe it down with a damp cloth and a small amount of non-abrasive cleaning agent.
- Never get the heater wet.
- Do not use it if it is wet.

Storage Instructions

- The best place to store your Heater when not in use, is in the box you purchased it in.
- Your Heater should be stored in a dry cool place.

After Sales Service

Your Elektra Comfort Heater is not user-serviceable.

If the Heater does not turn on, check to see that:

1. You have followed the instructions properly.

2. The outlet supply is switched on.
 3. The main supply fuse/circuit breaker has not blown/tripped.
- If the appliance still does not work, contact the Service Centre.

If the power supply cord or any wiring is damaged, or the Heater has been misused or damaged, stop use immediately and contact the Service Centre.

TEL: 011 393 1328 FAX: 011 393 1501 EMAIL: technical@sp-africa.com

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specifications

220-240V 50hz 400/800/1200W



**140 North Reef Road
Elandsfontein
South Africa
1401**

**Tel: 011 393 – 1328 Fax: 011 393 – 1501
www.sp-africa.com**