

CARMEN

PARIS



INSTRUCTION MANUAL

Curl Power Hot Airbrush

Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

Important Safeguards

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:

1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water. Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on, or near children, persons with diminished capacity or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Hair lacquers and fixing sprays contain flammable materials. Do not spray while using the hair dryer.
16. Do not direct hot air from the dryer towards the eyes or other areas sensitive to heat such as the face and neck.
17. Take special care when using the dryer near children or anyone who is sensitive to heat.
18. Switch the dryer off before putting it down, even if it is just for "a moment".
19. Keep the air intake cover free of dust or fluff.
20. Do not allow the air inlet or outlet to become blocked or even partially blocked. This may cause the appliance to overheat. If it does overheat, the safety cut-out will cause the appliance to switch off and remain inoperable until the unit has sufficiently cooled down. In this event, switch off the appliance, unplug it and let it cool down. Remove any blockage to the air inlet or outlet before resuming use. If the appliance should cut out again, even when there is no blockage, contact the approved Service Centre for examination and repair.
21. After using any of the attachments, allow them to cool before removing them, or remove them using a towel, to avoid burning your fingers.

22. Do not use the appliance within 1 meter of any other electrical or electronic appliance (e.g. TV, computer, ...) as it may cause interference.
23. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

Additional Safeguards


1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when held by the handle. When operating, do not hold the appliance by the AC power cord.
3. Avoid contact with HOT attachments as they will burn the skin with which it comes into contact.
4. If the electrical circuit is overloaded with other electrical appliances, your Curl Power Hot Airbrush may not operate properly. It should then be operated on a separate circuit from other appliances.

PLEASE NOTE

1. This appliance generates heat which can cause burns.
2. The appliance on its own cannot cause any damage, but if it is used incorrectly, misused or abused, injury, bodily harm and or damage may result.
3. Please treat and use this appliance carefully and with respect.
4. Pharmalec Agencies C.C. (and any associate Companies and subsidiaries) in no way warrants that this product cannot cause damage, and will not entertain any claims for damages where the appliance was under the control of the purchaser, user or any other party, when the damage occurred.
5. Should you not be satisfied with this product, please return it to the store of purchase in its original condition and packaging within 7 days of its purchase for a full refund. A valid original proof of purchase is required.

Household use only

Know your Curl Power Hot Airbrush

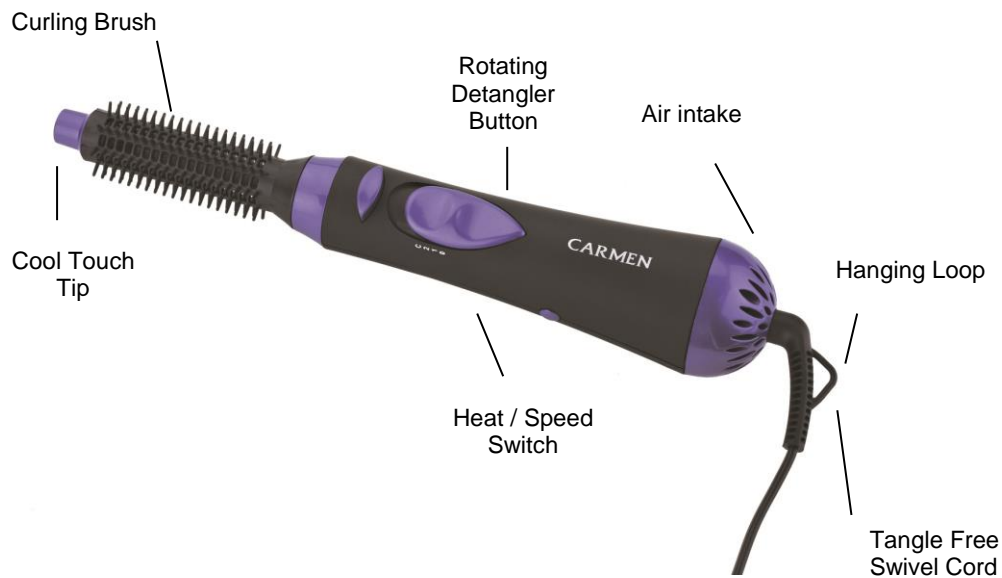

Heat / Speed switch settings

Low (1):

Low speed and heat.

High (2):

High speed and heat .

Cool Shot/Care (C):

For finishing your hairstyle, or for styling fragile, damaged, over-processed or permed hair.

Styling tips

1. Use your Curl Power Hot Airbrush as a styling/finishing tool.
2. It may be used on dry hair or hair that has been towel dried thoroughly.
3. Hair must be tangle-free prior to using the Curl Power Hot Airbrush.

Styling times

1. Styling time will vary with different hair textures and depending on how damp the hair is before styling.
2. Average styling times can range from 3 to 15 seconds.
3. Test a section of hair to judge the styling time.
4. Repeat as necessary until the section is styled.

Avoiding hair tangles

If your hair gets caught in the attachment, do not panic!

The unique rotating detangler should ensure that you do not have any tangles.

In the unlikely event that your hair should become tangled:

1. Immediately slide the speed switch to the OFF (O) position.
2. Unplug the Styler.
3. Depress the rotating detangler button, and gently and slowly pull the hair free.
4. Twisting the attachment up and down will only cause the attachment to become more tangled.
5. Using the end of a tail comb is sometimes useful to loosen the tangled area if it has become very tangled. Once you have loosened the hair repeat step 3.
6. Try not to wrap the hair around the brush more than 2 – 3 times.

Long hair

1. Use caution with hair that is longer than shoulder length.
2. Use small sections and take your time.
3. Be cautious to avoid tangles.

Cool Shot

1. While styling, it is a good idea to slide the settings switch to the Cool Shot setting, before letting the hair down.
2. Cold air helps to set the curl for a longer lasting style.
3. The hair must be completely dry and warm to the touch before using the Cool Shot.

Damp hair

1. If styling damp hair, the use of a mousse or styling spray is helpful to maintain volume and hold the curl.
2. Use a hairdryer to remove excess moisture from the hair before using the Curl Power Hot Airbrush.
3. The hair should feel moist to the touch (a little more than halfway dry).

Dry hair

1. Hair that is dry should be “misted” slightly using a spray water bottle, then combed through.
2. Although the Curl Power Hot Airbrush may be used on dry hair, misting allows the hair to be more responsive to styling.

Operating the Curl Power Hot Airbrush

1. Plug the Curl Power Hot Airbrush into an AC electrical outlet.
2. During the first few minutes of initial use, or after being stored for a while, you may notice smoke and a slight odor. This is normal and should quickly dissipate.

3. Set the Curl Power Hot Airbrush to the desired setting.
4. Direct the Curl Power Hot Airbrush through a section of hair at a time.
5. The average size of a section should be between 2 – 2.5 centimeters thick and 4 – 5 centimeters wide.
6. When finished, slide the speed switch to the OFF (O) position and unplug the unit.

Care and Maintenance

1. Switch the Curl Power Hot Airbrush off, unplug it and let it cool down.
2. Wipe the body of the Curl Power Hot Airbrush with a soft damp cloth. If necessary use a little washing-up liquid.
3. Remove deposits from the inlet grille, filter mesh and styling attachment, by brushing with a soft brush.
4. Do not immerse the appliance in water or any other liquid.
5. Do not use harsh or abrasive cleaning agents or solvents.

After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

TEL: 011 393 1328 FAX: 011 393 1501 EMAIL: technical@sp-africa.com

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specifications

220-240V 50hz 400W



Always remember to use EHC Thermal Products when exposing your hair to heat.

EHC has been specially designed to protect your hair from heat, before and after heat exposure. We spend so much of our time grooming ourselves that we tend to forget the extreme heat our hair is being exposed to. This heat can cause your hair to become brittle, dry and lifeless. To improve the look and feel of your hair, and to avoid unnecessary damage use EHC products.

- EHC Thermal Protect
- EHC Thermal Replenish
- EHC Thermal Repair
- EHC Thermal Strengthen
- EHC Thermal Rescue
- EHC Thermal Shampoo
- EHC Thermal Conditioner
- EHC Thermal Mousse
- EHC Thermal Hairspray

ecofriendly

Please consider the environment when disposing of packaging.

Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal, or disposal advice.



**140 North Reef Road
Elandsfontein
South Africa
1401**

**Tel: 011 393 – 1328
Fax: 011 393 – 1501
www.sp-africa.com**