

CARMEN

PARIS



INSTRUCTION MANUAL

Girls Night Out Set

Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

Important Safeguards

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed.

Please read the following carefully before use:

1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water. Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Hair lacquers and fixing sprays contain flammable materials. Do not spray while using the hair dryer.
16. Do not direct hot air from the dryer towards the eyes or other areas sensitive to heat such as the face and neck.
17. Be careful when using the straightener near areas sensitive to heat such as the face and neck.
18. Take special care when using the appliances near children or anyone who is sensitive to heat.
19. Supervision by a competent person is required when used by or on children or invalids.
20. Switch the dryer off before putting it down, even if it's just for "a moment".
21. Keep the air intake cover free of dust or fluff.
22. Do not allow the air inlet or outlet to become blocked or even partially blocked.
This may cause the dryer to overheat. If it does overheat, the safety cut-out will cause the dryer to switch off and remain inoperable until the unit has sufficiently cooled down. In this event, switch off the appliance, unplug it and let it cool down. Remove any blockage to the air inlet or outlet before resuming use. If the dryer

should cut out again, even when there is no blockage, contact the approved Service Centre for examination and repair.

23. After using any of the attachments, allow them to cool before removing them, or remove them using a towel, to avoid burning your fingers.
24. Do not use the dryer within 1 meter of any other electrical or electronic appliance (e.g. TV, computer,...) as it may cause interference.
25. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

Household use only

Additional Safeguards

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when held by the handle. When operating, do not hold the appliance by the AC power cord.
3. Avoid contact with HOT attachments as they will burn the skin with which it comes into contact.
4. If the electrical circuit is overloaded with other electrical appliances, your Hairdryer may not operate properly. It should then be operated on a separate circuit from other appliances.

Know Your Hairdryer



Using the Hairdryer

1. Plug the appliance into the electrical outlet.
 2. Switch the appliance on by selecting the desired setting.
- The airflow and temperature can be adjusted as follows:

Speed & Heat setting

2: high speed

1: low speed

0: Off.

- a. Use setting "2" for fast drying or pre-drying.
- b. Use setting "1" for gentle drying and styling.


Styling attachment

- Concentrator

The concentrator enables you to direct the airflow towards the area you are styling.

Connect the styling attachment by clipping it onto the appliance. Disconnect it by pulling it off.

Know Your Straightener

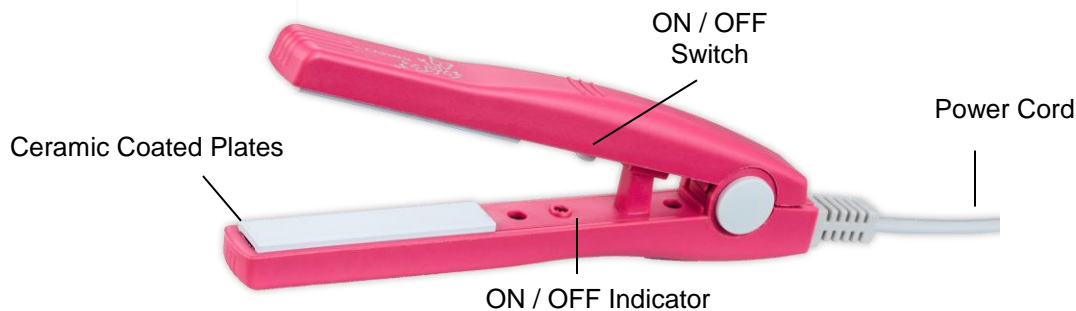

Using the Straightener

1. After washing your hair, towel dry.
2. The straightener has been designed to work with dry hair.
3. Comb your hair using a wide toothed comb to ensure your hair is completely tangle free before styling.
4. Divide your hair into styling sections, not more than 5 – 7 centimetres wide and 1 - 1½ centimetres thick, brushing each section thoroughly.
5. Place the straightener as near to your scalp as possible.
Beware of burning yourself!
6. Clamp your hair between the 2 styling plates.
7. Hold the straightener closed tight for 5 – 10 seconds. The texture of your Hair will determine how long to keep the hair clamped.
8. Gently slide the straightener slowly towards the hair ends. The anodised straightening plates avoid the hair from sticking to the plates.
9. Repeat the above process on all sections of hair until completely finished.
10. Slide the settings switch to the OFF position. Always unplug the appliance immediately after use.

N.B.: The areas above and below the plates may become very hot during use. To avoid burning yourself hold the appliance further back.

Care and Maintenance

1. Switch the appliance off, unplug it and let it cool down.
2. Wipe the body of the appliance with a soft damp cloth. If necessary use a little washing-up liquid.
3. Remove deposits from the hairdryers inlet grill, filter mesh and styling nozzle, by brushing with a soft brush.
4. Remove deposits from the straighteners plates by brushing with a soft cloth.

5. Do not immerse the dryer in water or any other liquid.
6. Do not use harsh or abrasive cleaning agents or solvents.

After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

TEL: 011 393 1328 FAX: 011 393 1501 EMAIL: technical@sp-africa.com

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered/modified, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specification

Hairdryer : 220 – 240V~ 50Hz 1200W

Straightener: 220 – 240V~ 50Hz 20W

The Environment

Please consider the environment when disposing of packaging.

Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal or disposal advice.



**140 North Reef Road
Elandsfontein
South Africa
1401**

Tel: 011 393 – 1328 | Fax: 011 393 – 1501 | www.sp-africa.com