

# CARMEN

---

PARIS



## INSTRUCTION MANUAL

IONIC 2200W



**Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.**

### **Important Safeguards**

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:

1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water. Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Hair lacquers and fixing sprays contain flammable materials. Do not spray while using the hair dryer.
16. Do not direct hot air from the dryer towards the eyes or other areas sensitive to heat such as the face and neck.
17. Take special care when using the dryer near children or anyone who is sensitive to heat.
18. Switch the dryer off before putting it down, even if it's just for "a moment".
19. Keep the air intake cover free of dust or fluff.
20. Do not allow the air inlet or outlet to become blocked or even partially blocked. This may cause the dryer to overheat. If it does overheat, the safety cut-out will cause the dryer to switch off and remain inoperable until the unit has sufficiently cooled down. In this event, switch off the appliance, unplug it and let it cool down. Remove any blockage to the air inlet or outlet before resuming use. If the dryer should cut out again, even when there is no blockage, contact the approved Service Centre for examination and repair.
21. After using any of the attachments, allow them to cool before removing them, or remove them using a towel, to avoid burning your fingers.

22. Do not use the dryer within 1 meter of any other electrical or electronic appliance (e.g. TV, computer,..) as it may cause interference.
23. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

### **Household use only**

#### **Additional Safeguards**

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when held by the handle. When operating, do not hold the appliance by the AC power cord.
3. Avoid contact with HOT attachments as they will burn the skin with which it comes into contact.
4. If the electrical circuit is overloaded with other electrical appliances, your Hairdryer may not operate properly. It should then be operated on a separate circuit from other appliances

## **Carmen IONIC Hairdryer**

Congratulations on the purchase of your IONIC Hairdryer!

Some of the features include:

- 2200 Watt motor
- 2 Speed and 3 Heat settings
- Cool Shot

The set consists of:

- Hairdryer
- Directional nozzle

## **Know Your Hairdryer**



### **Styling Tips and Instructions for Use**

1. Wash and condition your hair, then towel dry.
2. Attach styling nozzle firmly on to the end of the dryer.
3. Start styling your hair at the back and work towards the front.
4. After using the styling nozzle let it cool down before removing it from the dryer, or remove using a towel.

Tip: Use EHC Thermal Protect to provide protection and moisture while drying

### **Blow Drying (without the styling nozzle)**

1. Hold the dryer about 20 centimetres (8 inches) away from the hair while drying.
2. For extra fullness, when your hair is almost dry, bend forward to hold your head upside down, and direct the airflow up from underneath, and move it to and fro. Beware of bending over too far, so as to avoid injury.

### **Ionic technology**

1. Anti-static hair drying
2. Creates silky smooth hair
3. Dries hair faster
4. Adds a natural shine to hair

### **Styling Nozzle**

1. The styling nozzle concentrates the airflow on to a small area of hair for fast, easy styling.
2. It is ideal for blow drying with a comb and styling brush.
3. Divide the hair into small sections and point the dryer along the shafts from the root to the ends, to give a smooth professional finish to the hair.

### **Cool Shot**

1. To set your style, depress the Cool Shot button and hold for about 15 seconds after styling a section of hair.
2. You can use the Cool Shot button regardless of Speed setting.
3. Once selecting the Cool Shot, the air should cool down immediately.
4. When curling your hair with a round brush, use the Cool Shot for about 15 seconds after drying, to set the curl.

### **Heat Selection**

You may have your own preferences, but as a general guide, use the Heat Setting **III** (HOT) for rough-drying, and for thicker heavier hair.

Use Heat Setting **II** (WARM) or Heat Setting **I** (COOL) for finer hair, and for more precise control when styling.

### **ON/OFF Speed Selection**

Use Speed Setting **II** (HIGH) for rough drying, and Speed Setting **I** (LOW) for styling. LOW speed gives more precise control when styling.

You may prefer HIGH speed for thicker, heavier hair, and LOW speed for finer hair.

To switch the dryer off, slide the switch to the **O** (OFF) position.

### **Air Filter**

Always make sure that the air filter is not blocked as this could cause your Hairdryer to malfunction. To keep the air inlet free of blockage please follow the steps below:

1. Remove the intake cover by grasping it and turning anti-clockwise.
2. Pull the cover away from the hairdryer.
3. Clean all deposits off the intake cover.
4. Place the intake cover back onto the hairdryer and turn clockwise to lock into place.

### **Care and Maintenance**

1. Switch the dryer off, unplug it and let it cool down.
2. Wipe the body of the dryer with a soft damp cloth. If necessary use a little washing-up liquid.
3. Remove deposits from the inlet grille, filter mesh and styling nozzle, by brushing with a soft brush and or hand washing in warm soapy water. Rinse and dry thoroughly.
4. Do not immerse the dryer in water or any other liquid.
5. Do not use harsh or abrasive cleaning agents or solvents.

### **After Sales Service**

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

TEL: 011 393 1328 FAX: 011 393 1501 EMAIL: <a href="mailto:technical@sp-africa.com">technical@sp-africa.com</a>
---

### **Guarantee**

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered, abused or

misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

### **Specifications**

220-240V 50Hz 2200W

### **The Environment**

Please consider the environment when disposing of packaging.

Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal, or disposal advice.



**8 Palala Street, Protec Park, Terenure Ext. 42,  
Kempton Park, South Africa, 1610**

**Tel: 011 393 – 1328**

**Fax: 011 393 – 1501**

**[www.sp-africa.com](http://www.sp-africa.com)**