

ELEKTRA™

— *health* + —



INSTRUCTION MANUAL

ULTRASONIC COOL STEAM HUMIDIFIER

Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instruction before using this appliance.

DANGER -To reduce the risk of electric shock:

1. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
2. Do not reach for an appliance that has fallen into water. Unplug it immediately.
3. Do not use or store the appliance where it can fall or be pulled into a tub or sink. Do not place or drop into water or other liquid.

WARNING: -To reduce the risk of burns, fire, electric shock or injury to persons:

1. An appliance should NEVER be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
2. DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electrical shock or injury.
3. Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended; specifically any attachments not provided with the unit.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to the Service Center for examination and repair.
6. Do not carry this appliance by the supply cord or use the cord as a handle.
7. Keep the cord away from heated surfaces.
8. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair and other debris.
9. Never drop or insert any object into any opening.
10. Do not attempt to plug or unplug the unit when you have wet hands.
11. Never operate on a soft surface, such as a bed or couch, where air openings may be blocked.
12. Do not use outdoors.
13. Connect the appliance to a properly grounded outlet only.
14. If the supply cord is damaged, contact the Consumer Service Centre for repair and replacement.
15. All servicing of this appliance must be performed by authorized service personnel only.
16. Keep all packaging and plastic bags out of the reach of children as these pose the risk as a choking hazard.

17. Use only normal tap water. Do not add anything to the water (e.g. salt, oils, perfumes, etc ...)
18. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

FOR HOUSEHOLD USE ONLY


Additional Safeguards

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when used according to the instruction guide.
3. If the electrical circuit is overloaded with other electrical appliances, your Humidifier may not operate properly. It should then be operated on a separate circuit from other appliances.

Additional Note

1. Should you find after extensive use that the floor around the humidifier is wet, please turn the humidity setting down to a lower setting.
2. As the steam generated from your humidifier is not a HOT steam, it will settle rather than rise, and when the humidity is too high over long periods larger amounts of vapour will settle on the floor causing it to get wet.

KNOW YOUR ELEKTRA HEALTH HUMIDIFIER

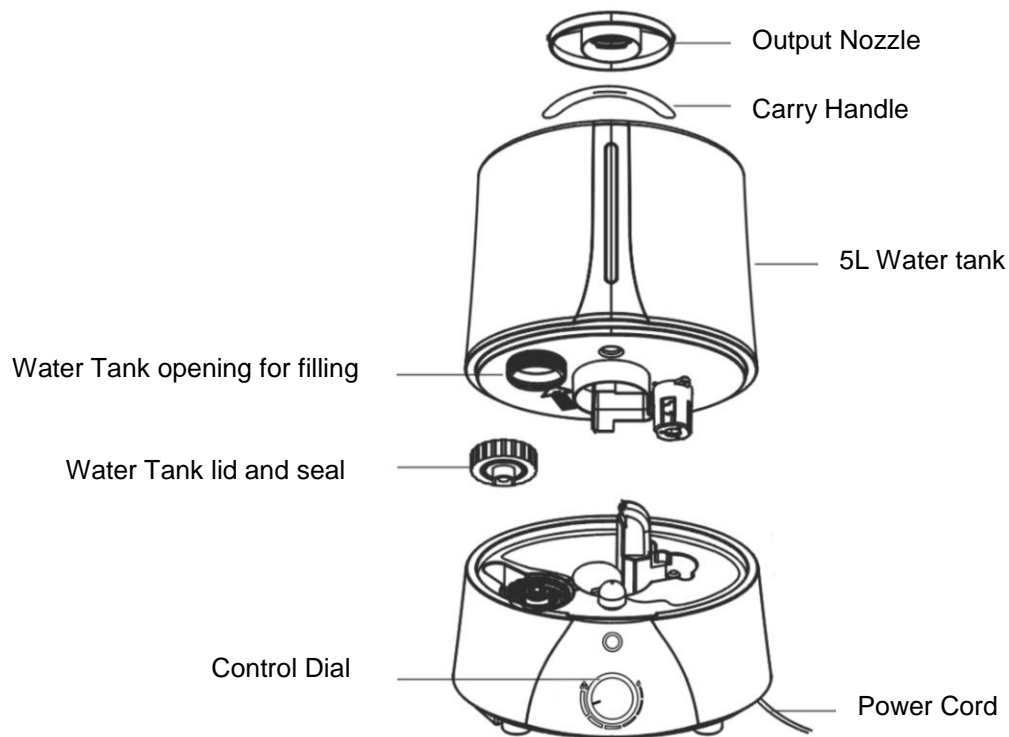

User Instructions

1. Place the base of unit on a smooth level surface.
2. Remove the water tank and unscrew the tank lid underneath the tank.
3. Pour plain cold tap water into the tank.
4. Always use ordinary tap water and never add anything to the water (e.g. salt, oils, perfumes, etc ...)
5. Ensure that you tighten the tank lid securely.
6. Place the tank onto the base.
7. Place the nozzle into the recess on top of the tank, and direct it away from walls and furniture.
8. Plug the appliance into the power outlet and turn the dial to ON.
9. The POWER light will illuminate.
10. When the unit is filled with water and working, the power light will illuminate BLUE.
11. When the water has been depleted, the power light will illuminate RED.
12. To adjust the mist output and control humidity, you may turn the CONTROL DIAL.

Care and Maintenance

1. Switch the appliance off and unplug it.
2. Wipe the body of the appliance off with a soft damp cloth. If necessary use a little washing-up liquid.
3. Rinse the water tank with clean water after each use. To dry for storage, wipe with a soft clean cloth.
4. Do not use detergents to clean any part of the unit that normally contains water. Detergents can interfere with the performance of the unit.
5. Do not immerse the humidifier in water or any other liquid.
6. Do not use harsh or abrasive cleaning agents or solvents.
7. Keep the transducer clean by brushing with a soft brush.
8. Do not store with water in the tank.
9. When cleaning the base, beware not to get water in the air outlet.

Trouble shooting

PROBLEM	CAUSE	REPAIR
1. The Humidifier does not turn on. There is no mist output and no air emission	Not connected to the power supply	Connect the humidifier to the power supply
	Humidifier not on.	Switch on the unit
2. Power on, air emission, but no mist output	No water in the water tank	Fill tank with water
3. Malodorous mist	New humidifier	Open water tank, and leave to air for 12 hours
	Dirty water used or old water in the water tank	Clean the water tank, fill with clean water
4. Power on, no air emission and no mist output	Too much water in the base	Empty the flume, and tighten the tank lid
5. Poor mist emission	Dirty ultrasonic transducer	Clean the transducer
	Dirty water used or old water in the water tank	Clean the water tank, fill with clean water
6. Abnormal noise / Noisy	Low water level in the tank.	Fill water tank.
	Resonance from table-board	Place on a stable level surface.

After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

TEL: 011 393 1328
FAX: 011 393 1501
EMAIL: technical@sp-africa.com

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered/modified, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specification

220-240V~ 50Hz 35W

The Environment

This appliance is rated at an operating input of 35 watts.



Please consider the environment when disposing of packaging.

Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal, or disposal advice.



**8 Palala Street, Protec Park, Terenure Ext. 42,
Kempton Park, South Africa, 1610**

Tel: 011 393 – 1328

Fax: 011 393 – 1501

www.sp-africa.com