

CARMEN

PARIS



INSTRUCTION MANUAL

SILK CURLS

VELVET ROLLERS 20's



Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

Important Safeguards

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed.

Please read the following carefully before use:

1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water. Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Take special care when using near children or anyone who is sensitive to heat.
16. Keep the air intake cover free of dust or fluff.
17. During use the rollers may become very hot, be careful when handling them so as to avoid burning yourself.
18. When the appliance is turned on the posts may become very hot, avoid touching these as they could burn you.
19. Do not use the appliance within 1 meter of any other electrical or electronic appliance (e.g. TV, computer...) as it may cause interference.
20. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.


Household use only

Additional Safeguards

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. When operating, do not hold the appliance by the AC power cord.
3. Avoid contact with HOT attachments as they may burn the skin with which it comes into contact.

4. If the electrical circuit is overloaded with other electrical appliances, your Carmen Silk Curls 20's may not operate properly. It should then be operated on a separate circuit from other appliances.

Know Your Carmen Silk Curls 20's

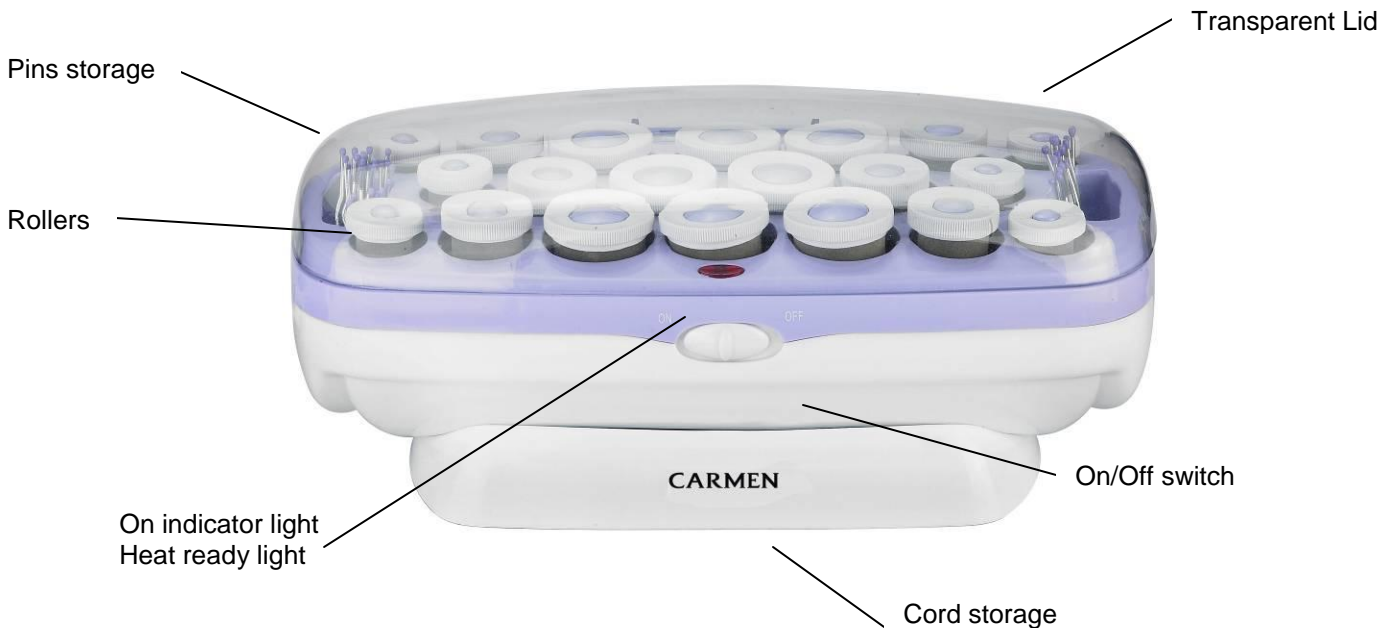

- 20 Rollers in 3 sizes (8 Large, 8 Medium, 6 Small)
- 20 Pins
- 20 Butterfly Clips
- Heated rollers stand with transparent cover
- On/Off Switch
- Power On indicator light
- Temperature Ready indicator light
- Cord storage in base

Using Your Carmen Silk Curls 20's

1. Plug the appliance into the electrical outlet.
2. Place all the rollers correctly into the stand.
3. Close the lid.
4. Switch the appliance on. The red indicator light should be illuminated bright red.
5. When the rollers are the correct temperature for use, indicator light will no longer be illuminated.
6. Your hair must be dry when using the curlers.
7. Take a section of hair, comb it straight and place around the roller working from the ends of the hair towards the roots. The section of hair should not be wider than the roller.
8. Choose the size of the roller by considering the length of hair to be curled and the size of the curl you wish to make.
9. For a traditional curl roll under and for a flip-up style, roll over.
10. Hold the rollers in place with the clips.
11. Repeat the remaining sections as described above.

12. Leave the rollers in your hair until they have completely cooled.
13. Remove the clips and rollers working from the base of the neck upwards.
14. Once your hair has completely cooled down, style with your fingers. Do not use a brush.
15. To maintain the style you may use mousse, styling gel, wax or spray.
 - For fine hair, apply mousse or volumising spray to damp or dry hair before setting.
 - For thick hair apply styling gel.
 - When using hairspray, lift the hair up and spray underneath. Spraying on top will weigh down your curls.

N.B.: ▪ Use on dry hair only.
▪ Do not use on artificial hair.

Care and Maintenance

1. Switch the appliance off, unplug it and let it cool down.
2. Wipe the body of the appliance with a soft damp cloth. If necessary use a little washing-up liquid.
3. Remove deposits from the rollers, posts and tray, by brushing with a soft brush or cloth.
4. Do not immerse the appliance in water or any other liquid.
5. Do not use harsh or abrasive cleaning agents or solvents.

After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

TEL: 011 393 1328 FAX: 011 393 1501 EMAIL: technical@sp-africa.com

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specification

220V~ 50Hz 350W

The Environment

Please consider the environment when disposing of packaging.
Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal or disposal advice.



**8 Palala Street, Protec Park, Terenure Ext. 42,
Kempton Park, South Africa, 1610**

Tel: 011 393 – 1328

Fax: 011 393 – 1501

www.sp-africa.com