

ELEKTRA™

— *comfort* —



INSTRUCTION MANUAL POWER FAN



Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

Important Safeguards

Before connecting the appliance check that the voltage indicated on the rating plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:

1. After unpacking, make sure that there are no visible signs of damage.
2. This appliance must only be used as a fan as indicated in the instructions. Any other use is to be considered hazardous. Selian Agencies C.C. and any of its associate companies cannot be held responsible for any damage or injury that may occur due to improper and incorrect use.
3. Please follow assembly instructions carefully.
4. Only turn on the appliance once you are completely certain that it has been assembled correctly, so as to avoid injury.
5. Do not use with wet hands or feet, or while your body is wet.
6. Do not use the Fan if it is wet.
7. Keep the Fan away from water. Do not use the Fan near water.
8. Should the Fan fall into water, first turn the power supply off and then remove the plug from the wall socket. Remove the Fan from the water, and contact the Consumer Service Centre to inspect your Fan before you use it again.
9. Do not pull the appliance or the power cord to remove the plug from the socket.
10. Before cleaning the appliance, disconnect it from the mains by removing the plug. Follow the cleaning instructions carefully.


11. Please follow cleaning instructions carefully so as to avoid injury or damage.
12. Should the Fan or protection fuse fail to work properly, turn off the appliance and unplug it from the power outlet. Contact the Consumer Service Centre for examination and repair.
13. Always unplug the appliance immediately after use.
14. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
15. During use, ensure that the power cord is completely unwound.
16. Close supervision is necessary when this appliance is used by or near children and invalids.
17. Keep the air intake cover free of dust or fluff.
18. Do not allow the air inlet to become blocked or even partially blocked. This may cause the Fan to overheat. If it does overheat, the safety cut-out will cause the Fan to switch off and remain inoperable until the unit has sufficiently cooled down. In this event, switch off the appliance, unplug it and let it cool down. Remove any blockage to the air inlet or outlet before resuming use. If the Fan should cut out again, even when there is no blockage, contact the approved Service Centre for examination and repair.
19. Do not cover the Fan or place anything over it.
20. Do not place anything through the grills or into the Fan.
21. Do not use the Fan if it is not properly and completely assembled.
22. Do not use the Fan without the mesh guards, as this could lead to injury.
23. Do not use the Fan within 1 meter of any other electrical or electronic appliance (e.g. TV, computer,..) as it may cause interference.
24. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

Household use only

Additional Safeguards

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when used according to the instruction guide.
3. If the electrical circuit is overloaded with other electrical appliances, your Fan may not operate properly. It should then be operated on a separate circuit from other appliances.

Know your Elektra Power Fan

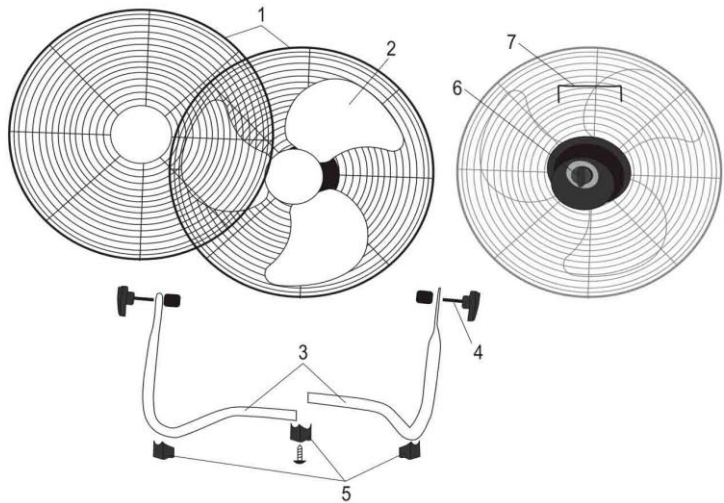

1. Protective grill
2. Metal fan blade
3. Base
4. Base fastening screw
5. Rubber feet
6. Switch
7. Carry handle

Assembling your Fan

1. Assemble guard cover and shroud ring

Place the back cover onto the output shaft of the motor. Note the direction of rotation. Then tighten the fastener to hold the back cover in place.

2. Install fan blade

Slide the Fan Blade on to the output shaft of the motor in front of the back cover. Then tighten the fastener of the fan blade anticlockwise.

3. Assemble front cover

1. Prepare the base which consists of two halves. Enclose the screw and rubber feet.
2. Using the base fastening screws, fasten both halves of the base to the grill. The rubber spacers should be placed between the grill and base.
3. Attach the two halves of the base then screw the enclosed rubber foot onto the joint.
4. Set the appliance on a stable and horizontal surface.
5. Make sure the switch is on '0'
- 6.** Connect the unit to the mains only after this has been properly and completely assembled.

Turning on your Fan and Speed Selection

- To turn on the Fan depress one of the Speed Selection switches.
- Setting 1 is for low fan speed.
- Setting 2 is for medium fan speed.
- Setting 3 is for high fan speed.
- Setting 0 will turn the Fan off.

N.B. Do not cover the Fan, or place anything over it.

Instructions for Cleaning

Should you need to clean the Fan:

- Unplug the Fan from the power outlet.
- Wipe it down with a damp cloth and a small amount of non-abrasive cleaning agent.
- Never get the Fan wet.
- Do not use it if it is wet.
- Clean the air inlet and outlet regularly. You may use a vacuum cleaner.

Storage Instructions

Your Fan should be stored in a dry cool place.

After Sales Service

Your Elektra Comfort Fan is not user-serviceable.

If the Fan does not turn on, check to see that:

1. You have followed the instructions properly.

2. The outlet supply is switched on.
 3. The main supply fuse/circuit breaker has not blown/tripped.
- If the appliance still does not work, contact the Service Centre.

If the power supply cord or any wiring is damaged, or the Fan has been misused or damaged, stop use immediately and contact the Service Centre.

TEL: 011 393 1328
FAX: 011 393 1501
EMAIL: technical@sp-africa.com

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been altered, abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specifications

230V 50hz 50W

The Environment

This appliance is rated at an operating input of 50 watts.

ecofriendly

Please consider the environment when disposing of packaging.
Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal, or disposal advice.



SELIAN AGENCIES C.C.
8 Palala Street, Protec Park, Terenure Ext. 42,
Kempton Park, South Africa, 1610
Tel: 011 393 – 1328
Fax: 011 393 – 1501
www.sp-africa.com