

CARMEN

PARIS



INSTRUCTION MANUAL

MULTI STYLE HOT AIRBRUSH 1000w



Read these instructions before use and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it until you are satisfied.

Important Safeguards

Before connecting the appliance check that the voltage indicated on the type plate corresponds to the mains voltage in your country.

When using electrical appliances basic safety precautions should always be followed. Please read the following carefully before use:

1. Always unplug the appliance immediately after use.
2. Do not use while in the bath.
3. Do not use with wet hands.
4. Do not allow the appliance to be placed or dropped into water or any other liquid.
5. Do not reach for an appliance that has fallen into water. Turn off the power supply to the appliance and then unplug from the wall socket.
6. Do not leave the appliance unattended when it is switched on.
7. Always allow the appliance to cool down before packing away.
8. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
9. The appliance should be used for its intended purpose only.
10. Never use attachments not recommended or sold by the appliance manufacturer.
11. Keep the cord away from heated surfaces.
12. Check the cord regularly for wear or damage, particularly where the cord enters the appliance and the plug.
13. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call the Consumer Service Centre for examination and repair.
14. Do not wrap the power cord around the appliance, straighten after use.
15. Hair lacquers and fixing sprays contain flammable materials. Do not spray while using the hair dryer.
16. Do not direct hot air from the dryer towards the eyes or other areas sensitive to heat such as the face and neck.
17. Take special care when using the dryer near children or anyone who is sensitive to heat.
18. Switch the dryer off before putting it down, even if its just for "a moment".
19. Keep the air intake cover free of dust or fluff.
20. Do not allow the air inlet or outlet to become blocked or even partially blocked. This may cause the dryer to overheat. If it does overheat, the safety cut-out will cause the dryer to switch off and remain inoperable until the unit has sufficiently cooled down. In this event, switch off the appliance, unplug it and let it cool down. Remove any blockage to the air inlet or outlet before resuming use. If the dryer should cut out again, even when there is no blockage, contact the approved Service Centre for examination and repair.
21. After using any of the attachments, allow them to cool before removing them, or remove them using a towel, to avoid burning your fingers.

22. Do not use the dryer within 1 meter of any other electrical or electronic appliance (e.g. TV, computer,...) as it may cause interference.
23. The installation of a residual current operated protective device with a nominal trip current of 30mA offers additional protection. Contact your electrician.

Household use only

Additional Safeguards

1. Do not try to repair the appliance yourself. Contact the approved Service Centre for examination and repair.
2. This product has been designed to operate safely when held by the handle. When operating, do not hold the appliance by the AC power cord.
3. Avoid contact with HOT attachments as they will burn the skin with which it comes into contact.
4. To extend the life of your Hair Styler, it is advisable to switch it to Heat "Setting 3" for a few seconds before switching off the appliance.
5. If the electrical circuit is overloaded with other electrical appliances, your Hair Styler may not operate properly. It should then be operated on a separate circuit from other appliances.

Know your Multi Style Hot Airbrush



Styling Attachments

1. Short Brush
2. Curling Brush
3. Thermal Round Brush
4. Curling Tong
5. Curling Brush – Retractable Bristles
6. Concentrator

How to use your Styler

Low (1):

For initial hair drying, and for most hair styling/setting procedures and hair types.

High (2):

For fast drying and high heat styling.

Using the attachments

Choose the particular Styling Attachment you wish to style your hair with, depending on the effect you wish to achieve.

Caution:

Never use the hot air styler body without first properly assembling the unit with the attachment of your choice.

Removing and Replacing attachments

1. The air styler and attachments should be completely cooled.
2. The speed switch should be in the OFF (O) position before removing or replacing any attachments.

Replacing Styling Attachments

1. On the inside of each Attachment there is an arrow ⇩.
2. Insert the attachment with the arrow aligned with the release button.
3. Push down until it you hear a click, indicating the attachment is securely in place.
4. Pull up on the attachment to ensure that it is securely attached.

Removing Styling Attachments

1. Push the release button, and pull the Attachment off the Air Styler with your other hand.
2. Caution: Thermal attachments will become hot during use. Handle the attachment by the plastic base or safety tip to avoid burns.

Styling tips

1. Use your hot air styler as a styling/finishing tool.
2. It may be used on dry hair or hair that has been towel dried thoroughly.
3. Hair must be tangle-free prior to using the Air Styler.

Styling times

1. Styling time will vary with different hair textures and depending on how damp the hair is before styling.
2. Average styling times can range from 20 seconds to 1 minute.
3. Test a section of hair to judge drying time.
4. Repeat as necessary until the section is dry.
5. When properly dried the hair should be completely dry and warm to the touch.

Volumising the hair

Whenever you brush your hair and partly blow-dry it against its natural growth pattern, you will add bulk to your hair and body to the style.

After partially drying your hair in this manner, you can then brush your hair and blow-style it in the direction you want the finished style to be.

Avoiding hair tangles

If your hair gets caught in one of the attachments, do not panic!

1. Immediately slide the speed switch to the OFF (O) position.
2. Unplug the Styler.
3. Depending on the situation you may want to detach the attachment from the handle or leave it on for better manageability.
4. First try loosening the hair on the attachment and then slowly unwinding it.
5. Twisting the attachment up and down will only cause the attachment to become more tangled.
6. Using the end of a tail comb is sometimes useful to loosen the tangled area.
7. When using the Retractable Brush, Thermal Brush and Curling Brush, never wrap the hair around the brush more than 2 times.

Long hair

1. Use caution with hair that is longer than shoulder length when using the following attachments: Retractable Brush, Thermal Brush and Curling Brush.
2. Use small sections and take your time.
3. Be cautious to avoid tangles.

Damp hair

1. If styling damp hair, the use of a mousse or styling spay is helpful to maintain volume and hold the curl.
2. Use the Concentrator Attachment to remove excess moisture from the hair before using the styling attachments.
3. The hair should feel moist to the touch (a little more than halfway dry).

Dry hair

1. Hair that is dry should be "misted" slightly using a spray water bottle, then combed through.
2. Although the Air Styler may be used on dry hair, misting allows the hair to be more responsive to styling.

Operating the Air Styler

1. Place and lock the desired attachment onto the Styler.
2. Plug the Styler into an AC electrical outlet.
3. During the first few minutes of initial use, or after being stored for a while, you may notice smoke and slight odor. This is normal and should quickly dissipate.
4. Set the Styler to the desired setting.
5. Direct the styler through a section of hair at a time. The average size of a section should be between 2 – 2.5 centimeters thick and 4 – 5 centimeters wide.
6. When finished, slide the speed switch to the OFF (O) position and unplug the unit.

Attachments:

Short Brush

1. Designed to direct warm air at the scalp aiding in creating maximum lift from the roots.
2. Insert the brush into the hair and starting as close to the roots as possible lift up 4 – 5 centimeters from the scalp.
3. Slide out hair when finished.

Thermal Round Brush

1. Add volume and gentle curl to your hair with this brush.
2. The Thermal Brush's heated barrel adds curling power.
3. Style hair until warm to the touch.

Style: Curled Under

➤ Medium to Long Hair

Begin styling the hair straight down along the length of the hair, from the scalp to 4 – 5 centimeters from the ends of the hair. After this section of the hair is dry, curl the ends under.

➤ Short Hair

While holding the ends of the hair, place the Styler at the base of the section (close to the scalp). Release the ends of the hair and move the Styler along the length of the hair to the ends. Once at the ends of the hair, roll back the Styler so the hair is wound like in a roller set.

Curling Brush

Using the Curling Brush attachment will provide similar effects as a standard curling brush with less heat, and is gentler on the hair.

Style: Barrel Curl

➤ Short Hair/Bangs

Warning: Use care not to touch the hot barrel.

Style: Tousled Hair

1. Create soft, tousled waves by curling each hair section in a random direction.
2. Then turn your head upside down, shake and gently scrunch your hair with your fingers.

3. Bring your head back to normal position and repeat for the fullest volume.

Curling Iron

1. Warning: Use care not to touch the hot thermal plates.
2. For quick and easy curls.

Curling Brush - Retractable Bristles

1. Once the hair has been set into style, the bristles are retractable for easy removal.

Concentrator

1. This nozzle helps direct the flow of air to a concentrated area for quicker drying and styling.

Care and Maintenance

1. Switch the appliance off, unplug it and let it cool down.
2. Wipe the body of the styler with a soft damp cloth. If necessary use a little washing-up liquid.
3. Remove deposits from the inlet grille by brushing with a soft brush.
4. Do not immerse the appliance in water or any other liquid.
5. Do not use harsh or abrasive cleaning agents or solvents.

After Sales Service

The appliance is not user-serviceable. If it is not working properly check:

1. You have followed the instructions properly.
2. The outlet supply is switched on.
3. The main supply fuse/circuit breaker has not blown/tripped.

If the appliance still does not work, contact the Service Centre.

TEL: 011 393 1328 FAX: 011 393 1501 EMAIL: technical@sp-africa.com

Guarantee

Any defect affecting the functionality of the appliance which becomes apparent within one (1) year of its purchase, will be corrected by free repair or replacement, provided that the appliance has been used and maintained in accordance with the instructions, and has not been abused or misused in anyway, and is accompanied with a Proof of Purchase to validate the age of the appliance.

Specification

220V 50Hz 1000W

The Environment

Please consider the environment when disposing of packaging.

Recycle wherever possible.

When you want to dispose of this appliance please do so responsibly, or contact us to assist with the disposal or disposal advice.



**8 Palala Street, Protec Park, Terenure Ext. 42,
Kempton Park, South Africa, 1610**

Tel: 011 393 – 1328

Fax: 011 393 – 1501

www.sp-africa.com