


Steam Sterilizer's Parts

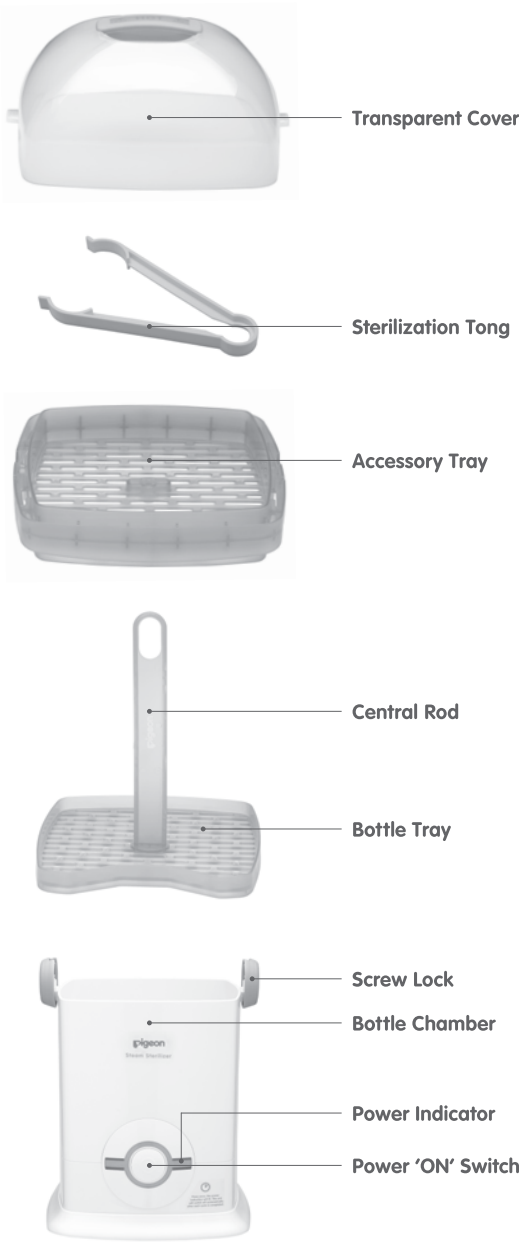

Quality Indication

Parts	Material	Heat Resistance
Cover	PP	120°C
Tong	POM	120°C
Accessory Tray	PP	120°C
Central Rod	PP	120°C
Bottle Tray	PP	120°C
Bottle Chamber	PP	120°C

Instructions For Use

Before sterilizing all bottles and accessories, they should be emptied, washed and rinsed thoroughly in clean water.



Measure exactly 110ml / 4oz of water using nursing bottle and pour into the bottle chamber. It is important to use the correct amount of water or the timing for sterilization cycle will vary.



The bottle holder is made up of 3 different parts: central rod, bottle tray and accessory tray. Insert the central rod into the center hole of bottle tray, twist in clock-wise direction to secure them together.



Place the assembled part (rod and bottle tray) into the bottle chamber. Place the bottles upside down on the bottle tray.



Slide the top tray over the rod through the center hole of top tray. Fit the top tray onto the bottle chamber and put other accessories (teats, caps, hoods, nipples, pacifiers, teethingers, etc) on top of the top tray.



Place the cover on the sterilizer using the location latch at both sides of the unit.



Lock the cover by turning the screw locks on both sides towards the back (follow the arrow indication on the screw locks).



Ensure the power cord is properly connected to the sterilizer and power socket.

The plug type indicated on instruction/packaging may vary from the authentic product due to different countries requirement.



Press the 'Power On' switch to start the sterilization cycle.



After a cycle is completed, let the sterilizer cool down for 3 minutes before removing any sterilized items from sterilizer.



Press once, the power indication will illuminate. The unit will switch off automatically after each cycle is completed.

Using Your Sterilizer For The First Time

1. Pour 110ml / 4oz of clean tap water using the measuring cup into the sterilizer and place all components (central rod, accessory tray and bottle tray) into bottle chamber and close with cover.

2. Connect the power cord to the power socket and turn on the power.

Note:

When using the sterilizer for the first time, you will find that the power on indicator will be illuminated. This is not a fault. The unit will switch itself off automatically when the first cycle is completed.

3. Let the sterilizer cool down for 3 minutes. Detach the power cord from the back of the sterilizer.

4. Remove all components and pour away the remaining water. Wipe dry. The sterilizer is now ready to use.

After Using Your Sterilizer

1. Do not remove the cover straight away after the cycle completes.

2. Wash your hands thoroughly before removing the sterilized items. If cover is not removed, items inside the bottle chamber will remain sterilized for up to 12 hours.

3. Pour away the remaining water from sterilizer, rinse and wipe dry.

**Do not reuse the sterilized water.**

4. Ensure your sterilizer is de-scaled regularly for sterilizer to operate effectively. (See Cleaning & Care For Your Sterilizer). It is recommended to use filtered / distilled water to reduce limescale build-up.

**DO NOT USE ABRASIVE MATERIALS TO CLEAN THE STERILIZER.**